


BLACK BOX SIGNAL MODULE

WWW.PURPOSEBUILTMOTO.COM

WIRING DIAGRAM

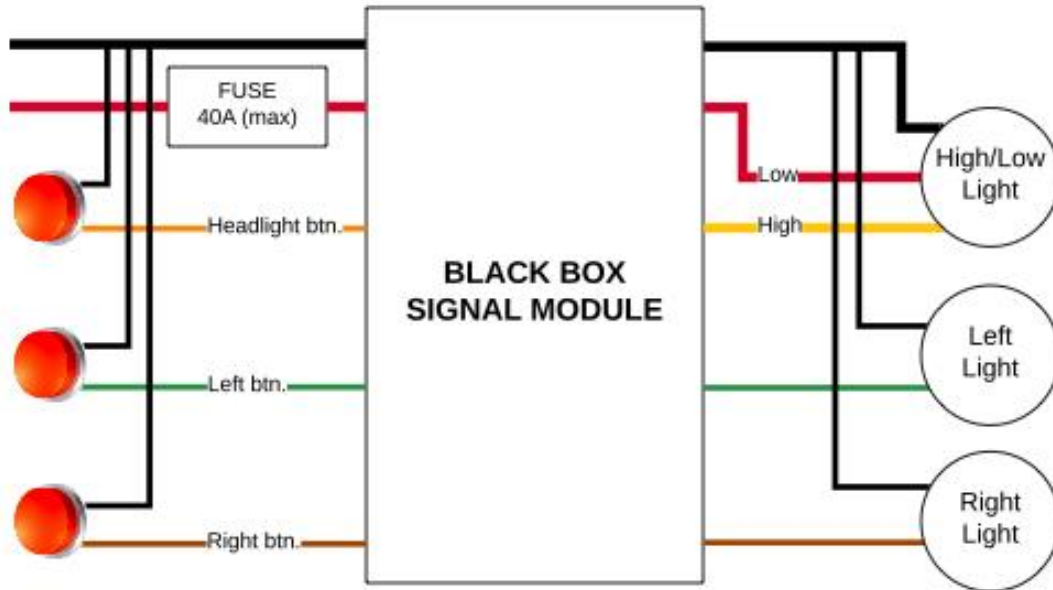



FUNCTIONS

- LOW BEAM IS CONSTANT
- QUICK PRESS THE HEADLIGHT BTN. TO FLASH THE HIGH BEAM/PASSING
- PRESS AND HOLD HEADLIGHT BTN. MORE THAN 1 SECOND TO TURN ON HIGH BEAM CONSTANT
- PRESS AND RELEASE LEFT/RIGHT BTN. TO BLINK LEFT/RIGHT LIGHT FOR 5 SECONDS
- PRESS AND HOLD LEFT/RIGHT BTN. MORE THAN 1.5 SECONDS TO BLINK LEFT/RIGHT LIGHT FOR 25 SECONDS
- PRESS LEFT/RIGHT BTN. AGAIN WHILE LEFT/RIGHT LIGHT IS BLINKING TO STOP
- PRESS AND HOLD BOTH LEFT AND RIGHT BTN. MORE THAN 1 SECOND TO ENTER HAZARD CONDITION (BLINKING BOTH LEFT AND RIGHT LIGHTS)
- PRESS AND HOLD BOTH LEFT AND RIGHT BTN. MORE THAN 1 SECOND AGAIN TO EXIT HAZARD CONDITION