



WWW.PURPOSEBUILTMOTO.COM

BLACK BOX CONTROL MODULE FUNCTIONS

HEADLIGHT BUTTON	LEFT BUTTON	RIGHT BUTTON
LOW BEAM AT START	PRESS -1 SEC	PRESS -1 SEC
PRESS -1 SEC	▼	▼
▼	FLASH 5 SECONDS	FLASH 5 SECONDS
MOMENTARY HIGH BEAM WHILE BUTTON PRESSED	PRESS AGAIN	PRESS AGAIN
▼	▼	▼
PRESS + 1 SEC	CANCEL	CANCEL
▼	PRESS +1 SEC	PRESS +1 SEC
HIGH BEAM LATCHED ON	▼	▼
LOW BEAM OFF	FLASH 15 SEC	FLASH 15 SEC
PRESS AGAIN ANY TIME	PRESS AGAIN	PRESS AGAIN
▼	▼	▼
HIGH BEAM OFF	CANCEL	CANCEL
LOW BEAM ON		
PRESS L+R +1 SEC		
▼		
CONSTANT HAZARD CONDITION BOTH LIGHTS FLASHING		

- LOW BEAM IS CONSTANT
- QUICK PRESS THE HEADLIGHT BTN. TO FLASH THE HIGH BEAM/PASSING
- PRESS AND HOLD HEADLIGHT BTN. MORE THAN 1 SECOND TO TURN ON HIGH BEAM CONSTANT
- PRESS AND RELEASE LEFT/RIGHT BTN. TO BLINK LEFT/RIGHT LIGHT FOR 5 SECONDS
- PRESS AND HOLD LEFT/RIGHT BTN. MORE THAN 1.5 SECONDS TO BLINK LEFT/RIGHT LIGHT FOR 25 SECONDS
- PRESS LEFT/RIGHT BTN. AGAIN WHILE LEFT/RIGHT LIGHT IS BLINKING TO STOP
- PRESS AND HOLD BOTH LEFT AND RIGHT BTN. MORE THAN 1 SECOND TO ENTER HAZARD CONDITION (BLINKING BOTH LEFT AND RIGHT LIGHTS)
- PRESS AND HOLD BOTH LEFT AND RIGHT BTN. MORE THAN 1 SECOND AGAIN TO EXIT HAZARD CONDITION

QUICK CONNECT GUIDE



